

## Adaptadores

Fornecido em aço carbono, latão ou aço inoxidável.

Obs.: Para solicitar a peça em latão, substituir o (A) por (L) no "código para pedidos".

Para solicitar a peça em aço inoxidável, substituir o (A) por (I) no "código para pedidos".

Outras medidas, sob consulta.

### Adaptador joelho fêmea


#### ADAPTADOR JOELHO FÊMEA

código para pedidos  
rosca NPT


código para pedidos  
rosca BSP

(A)AJF 1/8 NPT  
(A)AJF 1/4 NPT  
(A)AJF 3/8 NPT  
(A)AJF 1/2 NPT  
(A)AJF 3/4 NPT  
(A)AJF 1 NPT

(A)AJF 1/8 BSP  
(A)AJF 1/4 BSP  
(A)AJF 3/8 BSP  
(A)AJF 1/2 BSP  
(A)AJF 3/4 BSP  
(A)AJF 1 BSP

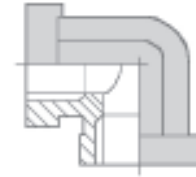

### Adaptador joelho macho x fêmea

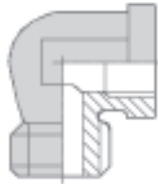

#### ADAPTADOR JOELHO MACHO – FÊMEA

código para pedidos  
rosca NPT

código para pedidos  
rosca BSP

(A)AJMF 1/8 NPT  
(A)AJMF 1/4 NPT  
(A)AJMF 3/8 NPT  
(A)AJMF 1/2 NPT  
(A)AJMF 3/4 NPT  
(A)AJMF 1 NPT

(A)AJMF 1/8 BSP  
(A)AJMF 1/4 BSP  
(A)AJMF 3/8 BSP  
(A)AJMF 1/2 BSP  
(A)AJMF 3/4 BSP  
(A)AJMF 1 BSP

### Adaptador tê fêmea


#### ADAPTADOR TÊ FÊMEA

código para pedidos  
rosca NPT


código para pedidos  
rosca BSP

(A)ATF 1/8 NPT  
(A)ATF 1/4 NPT  
(A)ATF 3/8 NPT  
(A)ATF 1/2 NPT  
(A)ATF 3/4 NPT  
(A)ATF 1 NPT

(A)ATF 1/8 BSP  
(A)ATF 1/4 BSP  
(A)ATF 3/8 BSP  
(A)ATF 1/2 BSP  
(A)ATF 3/4 BSP  
(A)ATF 1 BSP

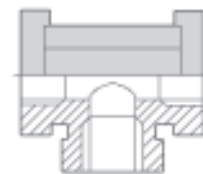

### Adaptador cruzeta fêmea

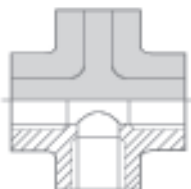

#### ADAPTADOR CRUZETA FÊMEA

código para pedidos  
rosca NPT

código para pedidos  
rosca BSP

(A)ACF 1/8 NPT  
(A)ACF 1/4 NPT  
(A)ACF 3/8 NPT  
(A)ACF 1/2 NPT  
(A)ACF 3/4 NPT  
(A)ACF 1 NPT

(A)ACF 1/8 BSP  
(A)ACF 1/4 BSP  
(A)ACF 3/8 BSP  
(A)ACF 1/2 BSP  
(A)ACF 3/4 BSP  
(A)ACF 1 BSP